


Instructions for Installing Jumper into Moteck CB3T-110-24-2-L-SY Controller

1. Remove the four (4) Phillips head screws from the back of the controller.



2. Flip the controller over, being careful not to lose the screws.

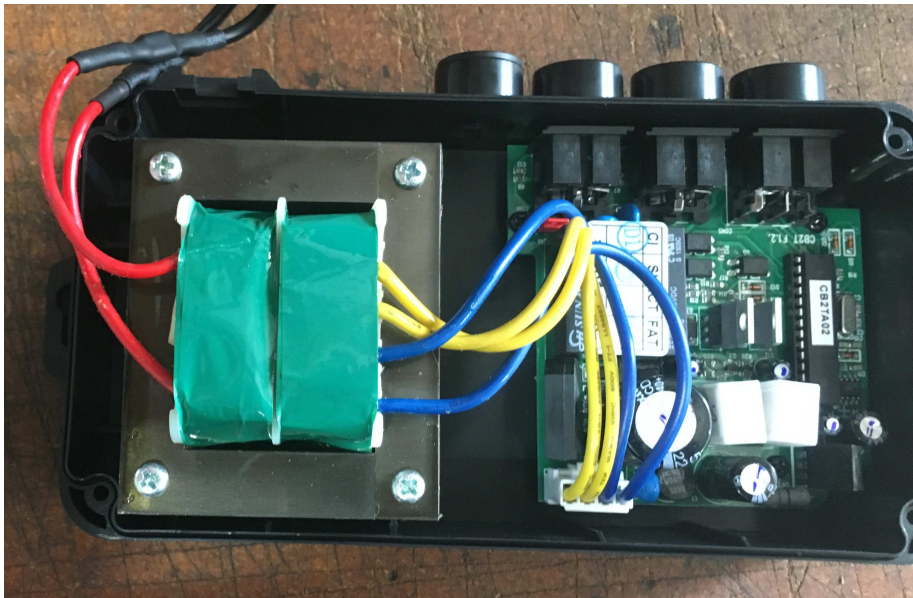

-
- A close-up photograph of a green printed circuit board (PCB) assembly. A white label with a black border is affixed to the board. The label contains a table with four columns: 'CI', 'SI', 'ICT', and 'FAT'. Below the table is the number '157012756'. The table cells contain blue circular markings: 'D1' under 'CI', 'D3' under 'SI', and a stylized 'G' under 'FAT'. The 'ICT' cell is empty. An orange arrow with a white outline points from the left towards a small black component on the PCB, labeled 'K1 0'. Other components visible include a large black electrolytic capacitor on the right, a blue capacitor, and various surface-mount components. Text on the PCB includes 'SUN HOLD', '12V DC', '5A 250VAC/30VDC', and 'S 1505C'.

-

5. Reinstall the cover and screws. Controller will not operate with one actuator.